

Schurter

CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1038-S

Part Number:	CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1038-S
ຜູ້ຜະລິດ / ຍີ່ຫໍ້:	Schurter
ລາຍລະອຽດສິນຄ້າ	SWITCH PUSHBUTTON SPST 100MA 42V
Datasheets:	PDF CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1038-S.pdf
ສະຖານະຂອງ RoHS	Lead free / RoHS Compliant
ເຮືອຈາກ	ຈີງກິງ
ເສັ້ນທາງຂົນສົ່ງ	DHL/Fedex/TNT/UPS/EMS

REQUEST FOR QUOTATION

ຮູບພາບອາດຈະເປັນຕົວແທນ.
ເບິ່ງຂໍ້ກຳນົດສຳລັບລາຍລະອຽດຜະລິດຕະພັນ.

ຂໍ້ມູນຈຳເພາະຂອງ CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1038-S

PART NUMBER	CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1038-S
ຜູ້ຜະລິດ	Schurter
ລາຍລະອຽດ	SWITCH PUSHBUTTON SPST 100MA 42V
ສະຖານະຂອງສະຖານະ / ສະຖານະ ROHS	Lead free / RoHS Compliant
ແຜ່ນຂໍ້ມູນ	PDF CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1038-S.pdf
VOLTAGE RATING-DC	60V
VOLTAGE RATING-AC	42V
ປະເພດ	Capacitive, Illuminated
ແບບສັນສຸດ	Wire Leads
FUNCTION SWITCH	Off-On
SERIES	CPS
PANEL CUTOUT DIMENSIONS	Circular - 19.10mm Dia
ການຫຸ້ມຫໍ່	Bulk
OPERATING TEMPERATURE	-40°C ~ 60°C
MOUNTING TYPE	Panel Mount, Front
ລະດັບຄວາມອ່ອນແອຄວາມຊຸ່ມຊື່ນ (MSL)	1 (Unlimited)
ຊີວິດກົນຈັກ	-
ສະຖານະຂອງສະຖານະ / ສະຖານະ ROHS	Lead free / RoHS Compliant
INGRESS PROTECTION	IP67 - Dust Tight, Waterproof
ແຮງດັນໄຟຟ້າ (ຊີ້)	5 ~ 28 VDC
ປະເພດສະຫວ່າງ, ສີ	LED, White/Cyan
ຄຸນລັກສະນະ	Ceramic Actuator, Subtract Symbol
ຊີວິດໄຟຟ້າ	-
ລາຍລະອຽດລາຍລະອຽດ	Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front
CURRENT RATING	100mA (AC/DC)
COLOR-ACTUATOR / CAP	Clear (White Filter/Diffuser)
ວົງຈອນ	SPST
ປະເພດກະແສໄຟຟ້າ	Round, Button, Flush

Related Tags

Schurter CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1038-S	ຕົວແທນ ຈຳ ໜ່າຍ CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1038-S	ຜູ້ສະ ໜອງ CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1038-S
ລາຄາ CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1038-S	ຮູບ CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1038-S	ຮູບພາບ CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1038-S
ເອກະສານຂໍ້ມູນ CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1038-S PDF	CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1038-S ຕາວໂຫລດ Datasheet	ເອກະສານຂໍ້ມູນ CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1038-S
ຜູ້ນ CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1038-S	ຊື່ CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1038-S	ຊື່ Schurter CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1038-S
Schurter CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1038-S	ຜູ້ສະ ໜອງ Schurter	ຕົວແທນ ຈຳ ໜ່າຍ Schurter
Schurter CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1038-S	Schurter Inc. CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1038-S	

ຜະລິດຕະພັນທີ່ກ່ຽວຂ້ອງ

<p>CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1044-S</p> <p>ຜູ້ຜະລິດ: Schurter ລາຍລະອຽດ: SWITCH PUSHBUTTON SPST 100MA 42V ໃນສາງ: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; border-radius: 5px;">RFQ</p>	<p>CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1042-S</p> <p>ຜູ້ຜະລິດ: Schurter ລາຍລະອຽດ: SWITCH PUSHBUTTON SPST 100MA 42V ໃນສາງ: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; border-radius: 5px;">RFQ</p>
<p>CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1035-S</p> <p>ຜູ້ຜະລິດ: Schurter ລາຍລະອຽດ: SWITCH PUSHBUTTON SPST 100MA 42V ໃນສາງ: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; border-radius: 5px;">RFQ</p>	<p>CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1039-S</p> <p>ຜູ້ຜະລິດ: Schurter ລາຍລະອຽດ: SWITCH PUSHBUTTON SPST 100MA 42V ໃນສາງ: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; border-radius: 5px;">RFQ</p>
<p>CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1041-S</p> <p>ຜູ້ຜະລິດ: Schurter ລາຍລະອຽດ: SWITCH PUSHBUTTON SPST 100MA 42V ໃນສາງ: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; border-radius: 5px;">RFQ</p>	<p>CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1043-S</p> <p>ຜູ້ຜະລິດ: Schurter ລາຍລະອຽດ: SWITCH PUSHBUTTON SPST 100MA 42V ໃນສາງ: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; border-radius: 5px;">RFQ</p>
<p>CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1040-S</p> <p>ຜູ້ຜະລິດ: Schurter ລາຍລະອຽດ: SWITCH PUSHBUTTON SPST 100MA 42V ໃນສາງ: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; border-radius: 5px;">RFQ</p>	<p>CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1037-S</p> <p>ຜູ້ຜະລິດ: Schurter ລາຍລະອຽດ: SWITCH PUSHBUTTON SPST 100MA 42V ໃນສາງ: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; border-radius: 5px;">RFQ</p>
<p>CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1036-S</p> <p>ຜູ້ຜະລິດ: Schurter ລາຍລະອຽດ: SWITCH PUSHBUTTON SPST 100MA 42V ໃນສາງ: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; border-radius: 5px;">RFQ</p>	<p>CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1032-S</p> <p>ຜູ້ຜະລິດ: Schurter ລາຍລະອຽດ: SWITCH PUSHBUTTON SPST 100MA 42V ໃນສາງ: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; border-radius: 5px;">RFQ</p>
<p>CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1034-S</p> <p>ຜູ້ຜະລິດ: Schurter ລາຍລະອຽດ: SWITCH PUSHBUTTON SPST 100MA 42V ໃນສາງ: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; border-radius: 5px;">RFQ</p>	<p>CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1033-S</p> <p>ຜູ້ຜະລິດ: Schurter ລາຍລະອຽດ: SWITCH PUSHBUTTON SPST 100MA 42V ໃນສາງ: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; border-radius: 5px;">RFQ</p>